


In this first step you will need the top cover (5), the bottom plate (10) and 2 x frame (6). Put the two parts of frame ready to assemble this part like picture with 16 x bolt M8\*12 (C) and 16 x flange nut M8 (D);




With the cabinet in the vertical, assemble the mounting angle (4) with 24 x bolt M6\*12 (B) in the horizontal sides of the cabinet;


## SERIES NORMA 800 - 38U UP TO 47U

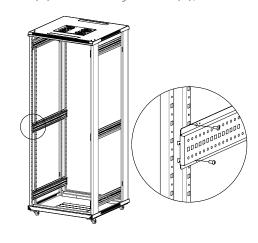

Safety warning – Do not climb on, rock, shake your rack. Only someone with good mechanical skill and who has experience should install this rack. Never exceed the maximum load capacity. If you didn't understood this instructions manual please contact us by **info@barpa.eu** 

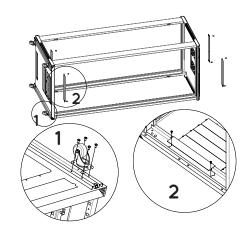

With the cable entry panel (11) and with the castors (12), assemble in the bottom plate with 24 x bolt M5\*10 (A);

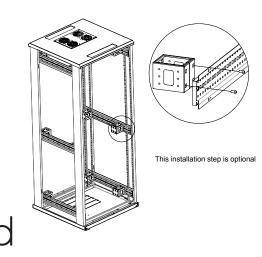


This installation step is optional. With  $24 \times bolt M6*12$  (B) fix the mounting spacer to the mounting angle;


IM\_03




Grab the 19" rails in the vertical and mount with 24 x bolt M6\*12 (B);

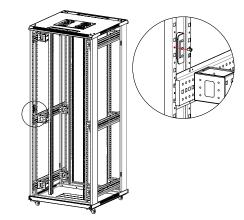


With 2 x bolt M5\*10 (A) fix the accessory to the frame;

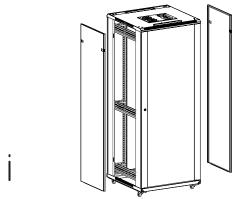

Put the side panels (2) and...

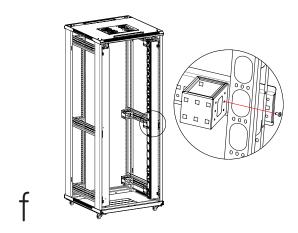

With 12 x bolt M5\*10 (A) fix the cable management (7) to the mounting spacer;

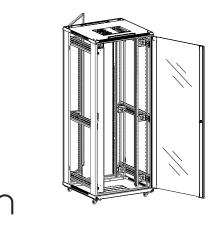

Now assemble the front door (1) and the rear door (7) you choose;



**Cautions:** To avoid any damage please ensure that is adequate space between each unit for good airflow. Take care to not exceed the 40°C – 104°F temperature. Accessories you can use with your Norma:

- Blank Panel;
- Shelfs;
- Sliding Shelf;
- Drawer;
- Digital Temperature Unit;
- Unit Fan's;
- Cable Management;
- Password Lock.